



AOI CLV-202 USER MANUAL


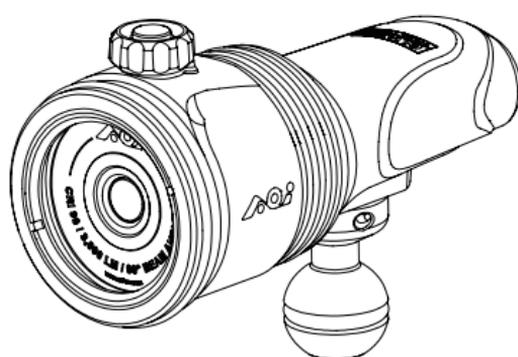


Installation

A

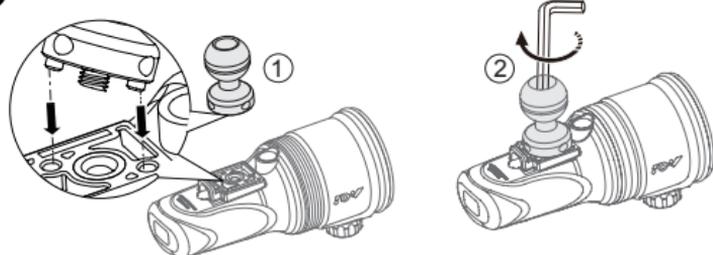


B

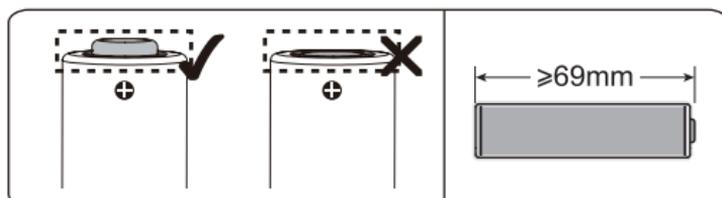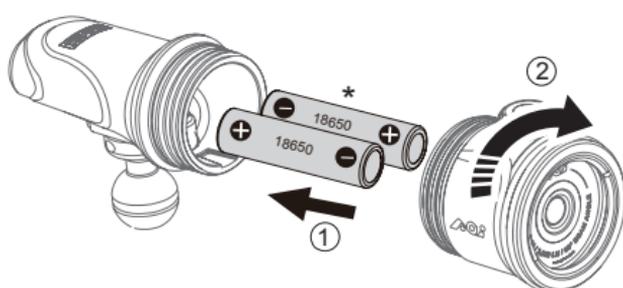


* Batteries are not supplied

Operation

A

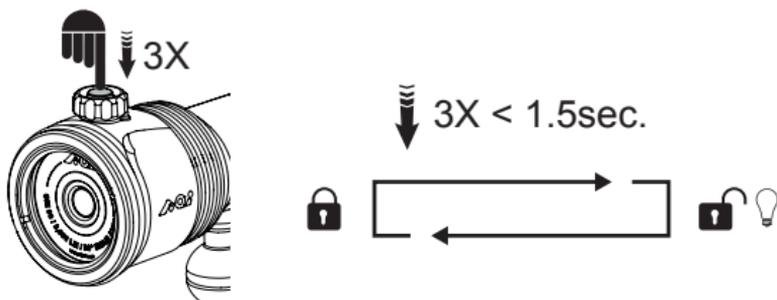

B

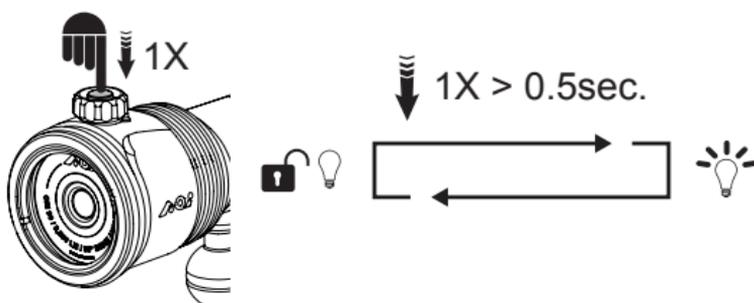

C

