






## MODE SETTING

Flash Mode Setting	SONY Cameras Setting		OMS Cameras Setting
	Wireless Flash	On	 Off
	WL		
	Wireless Flash	Off	 On
	WL		
	Wireless Flash	Off	
	WL		

\* This setting only applies to AOI underwater camera housings.